

LET'S GET YOU SET UP WITH THE ROCKBOT PLAYER

 
It's easy to get started.
Simply connect your
new Rockbot Media
Player to:



Follow this guide and
you'll be rocking out in
no time!

If at anytime during the installation you need extra assistance, contact our support team at support@rockbot.com, 415-813-6020 ext 1 or visit our online help center at support.rockbot.com.

What's in
the box?



Two-Piece Power Adapter



Rockbot Media Player



USB-C to 3.5mm Adapter



 
RCA Cable



Ethernet Cable



MicroSD Card (Already inserted)




HDMI Cable



WiFi Antenna


Know your ports

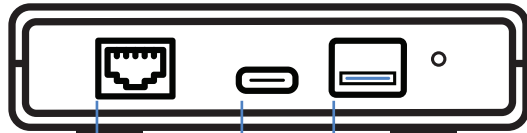

Ethernet

USB

MicroSD
already inserted

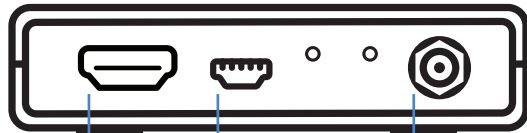

HDMI

Power

WiFi Antenna Jack*

 
Install your player




1. Ensure the MicroSD card is completely inserted into its slot on the Rockbot Media Player.



2. Connect the Ethernet Cable into the Rockbot Media Player and the other end to an open port on your router/modem.



 
3. For audio, connect the USB-C to 3.5mm adapter into the USB port on the Rockbot Media Player.



4. Connect the 3.5mm end of the RCA cable into the 3.5mm adapter. Then connect the RCA cables of the audio cable into your amplifier/receiver.



 5. OPTIONAL If you are not using a display, skip this step. Connect the HDMI cable from the Rockbot Media Player to your video display.



6. Insert the power cord into the Rockbot Media Player and the other end to a power source. Within **10 min**, music and display should start streaming. **Important: plug in power last.**

*If you want to use wifi, visit setup.rockbot.com for further steps.

Something wrong?

Here are some tips.

If no audio plays after 10 min try the following:

- Power cycle the Rockbot Media Player by unplugging the power adapter, wait until all lights are off and then plug the adapter back in. All connections on the device should be seated.
- Connect a standard set of headphones/earbuds into the audio adapter in your Rockbot Media Player.
- If you hear audio, reconnect the audio cable into the Rockbot MediaPlayer. Verify that the amplifier/receiver is connected to the proper source and the volume on the amplifier is turned up.
- If you don't hear audio, ensure there is a red power light on the Rockbot Media Player. Check to make sure the microSD card is firmly seated in the device. Confirm that the Rockbot Player has access to the necessary Rockbot servers, email support@rockbot.com to request network requirements.

If you hear error messages:

- If you hear error messages through your speakers or if your Rockbot Media Player is not playing music, there may be a firewall or network issue, contact support team at support@rockbot.com for network requirements.

If you're not getting any display try the following:

- Make sure HDMI cable is firmly attached to player and display.
- Make sure video display is set to the proper HDMI input source.
- Power cycle the Rockbot Media Player and then the display to re-establish input detection.

Need further assistance?

Contact our support team at support@rockbot.com, 415-813-6020 ext 1 or visit our online help center at support.rockbot.com.

